

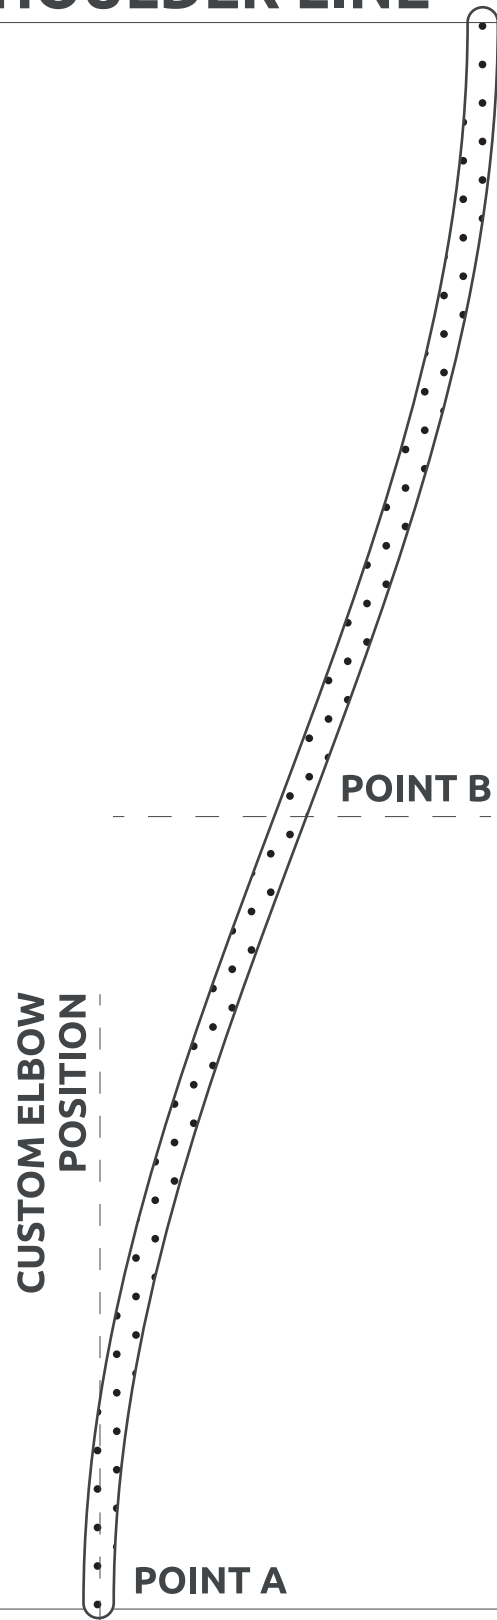


tshirts and coat ELBOW ROTATION

SHOULDER LINE POINT C

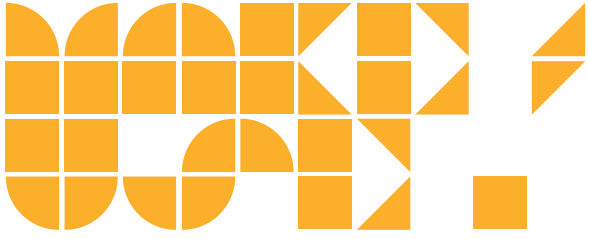

SLEEVE DEPTH (STEP 1) FABRIC EDGE (STEP 2)

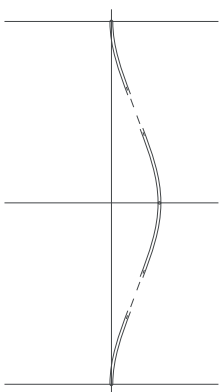

STEP 1: mark point A (sleeve depth) to point B, extend, mark to point C (shoulder)

STEP 2: flip template and repeat from fabric edge to shoulder

STEP 3: prefinish, sew sleeve, cut, rotate and sew to rejoin

